





### Installation:

1. The **DM3** nozzle must be installed and maintained in compliance with this document and according to the standards, or the requirements which are specified by the Authority Having Jurisdiction. It is the installers responsibility to conform to such standards and requirements, deviations from the requirements will void any warranty.
2. To ensure that the minimum flow requirement is met the system piping must be correctly sized.
3. To avoid mechanical damage the nozzles must be installed after the piping is in place. Any damaged nozzles must be replaced.
4. The **DM3** nozzle is to be installed in the pendant orientation only.
5. Hand tighten the nozzle into the fitting, then use the **DM3** nozzle installation tool to tighten the nozzle into the fitting.

### Care & Maintenance:

1. Nozzles must be carefully handled
2. Nozzles must never be painted, plated, coated or otherwise modified after leaving the factory.
3. The nozzles should remain packaged as supplied by the factory until the time of installation.
4. Do not install nozzles which have been dropped or damaged in any way.
5. Installed nozzles should be inspected by a competent person through the life time of the nozzles.



### Warranty:

From dispatch a 12 month warranty period is in place.  
For full details please refer to our standard terms & conditions.